

# Bag Stands indoor

- ▶ Chrome body.
- ▶ Easy bag attachment with a rubber band.
- ▶ grid at the bottom prevents the bag tearing.
- ▶ 80 mm Ø castors.

Type **4142**

120 l

560 × 580 × 1020 mm

**Version with a Plastic Lid and a Foot Pedal System**

Type **5081**



- ▶ Chrome body.
- ▶ Easy bag attachment with a rubber band.
- ▶ grid at the bottom prevents the bag tearing.
- ▶ 185 mm Ø wheels.

Type **7615**

120 l

580 × 580 × 1020 mm

**Version with a Plastic Lid and a Foot Pedal System**

Type **7616**



- ▶ Chrome body.
- ▶ Easy bag attachment with clips.
- ▶ grid at the bottom prevents the bag tearing.
- ▶ 80 mm Ø castors.

Type **7618**

120 l

600 × 620 × 1030 mm

**Version for 2 Bags**

Type **7617**

2 × 120 l

600 × 670 × 1100 mm

